

View saved video

Saved video from video devices can be viewed from the website and the app.

To view saved video using the website:

1. Log into the website.
2. Click **Video**.
3. Click **Saved Video Clips**.
4. Click the desired clip to play it.

Saved video page functions using the website

Selected clip functions:

- To select/deselect all clips, click the *Select/deselect all clips* icon.
- To play selected clips, click ▶.
- To download selected clips, click ⬇.
- To rename selected clips, click ✎.
- To protect selected clips, click 🔒.
- To delete selected clips, click 🗑.
- To view the save video settings of the selected clip's video device, click ⚙.
- To view the upload limit status, click **Upload Limit**.
- To switch between gallery and list view, click the *Gallery View* or *List View* icons.

Search functions:

- Using the *All cameras* dropdown menu, select the desired camera to include in the search.
- Click the *Include protected clips* icon to include protected clips.
- Click the *Include unprotected clips* icon to include unprotected clips.
- Click 🗑 to include deleted clips.

Note: Once a clip is deleted, the clip cannot be retrieved. Deleted clips will only include summary information about the clip.

- Enter a clip name in the *Clip description* field to include a specific clip description.
- Use the *Trigger* dropdown menu to select the desired triggers to include.
- In the *From:* and *To:* fields, select a date range to include.

Browse functions:

- Using the *Show:* dropdown menu, click to select the desired number of clips to show per page.
- In *Go to page:* click the desired page to show.

To view saved video from the app:

1. Log into the customer app.
2. Tap ☰.
3. Tap **Video**.
4. Tap **Saved**.
5. Tap ▶ on the desired clip to play it.

Saved video page functions using the app

- Tap ▶ to play the selected clip.
- Tap ⋮ to expand additional options:
 - Tap **Protect** to protect the selected clip.
 - Tap **Deleted** to delete the selected clip.

Filter page functions using the app

- Tap ☰ to open the filter page:
 - Tap to select **Recommended Defaults** to use the default filter settings.
 - In *Cameras*, tap to select the desired video device to view.
 - In *Show*, tap to select the desired clip range.
 - In *Clip Trigger*, tap to select the desired recording triggers.
 - In *Description*, enter the desired clip name.
 - In *Protected*, tap to select/deselect **Only protected clips**.